 




EMIT



Instructions

THE VISCOUNT

Setting the time

Pull the crown out to position 2. The seconds hand has now stopped, allowing you to set the correct time.

To avoid confusion between the A.M. and P.M. move the hands to the 12 O'clock position. If the date changes, it is midnight.

To set the hour and minute, turn the crown until the correct time has been reached. Once the correct time is set, push the crown back to position 0.

 
Setting the date

Pull the crown out to position 1. The seconds hand will continue to function allowing for continuous time telling.

Turn the crown clockwise to select the correct date.

Once the correct date has been selected, push the crown back to position 0.

- A — Minute Hand
- B — Hour Hand
- C — Seconds Hand
- D — Date Window
- E — Crown

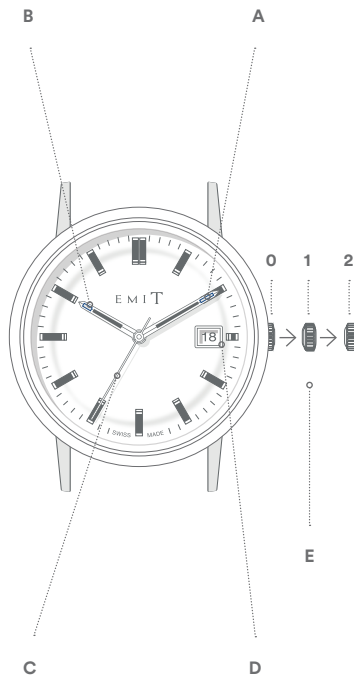

THE NOBLEMAN

Setting the time

 
Pull the crown out to position 2.

The seconds hand has now stopped, allowing you to set the correct time.

To set the hour and minute, turn the crown until the correct time has been reached.

Once the correct time is set, push the crown back to position 0.

- A — Minute Hand
- B — Hour Hand
- C — Seconds hand
- D — Crown

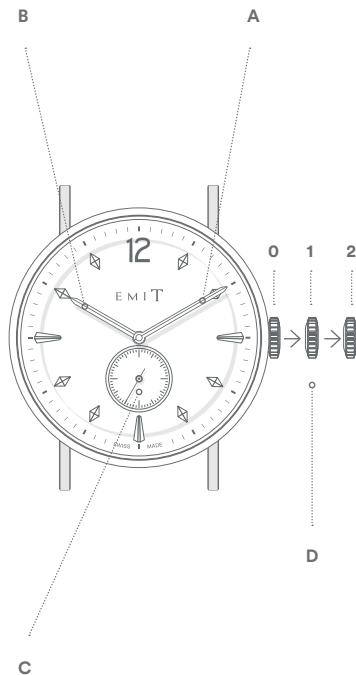

THE PEER

Setting the time

Pull the crown out to position 2. The seconds hand has now stopped, allowing you to set the correct time.

To avoid confusion between the A.M. and P.M. move the hands to the 12 O'clock position. If the date changes, it is midnight.

To set the hour and minute, turn the crown until the correct time has been reached. Once the correct time is set, push the crown back to position 0.

 
Setting the date

Pull the crown out to position 1. The seconds hand will continue to function allowing for continuous time telling.

Turn the crown clockwise to select the correct date.

Once the correct date has been selected, push the crown back to position 0.

- A — Minute Hand
- B — Hour Hand
- C — Seconds Hand
- D — Date Window
- E — Crown

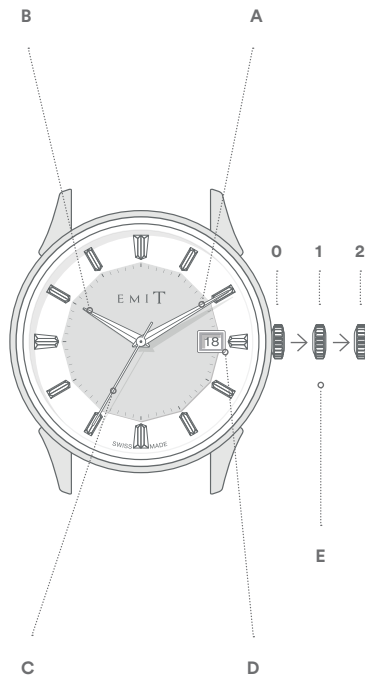

THE GENTRY

Setting the time

Pull the crown out to position 2. The seconds hand has now stopped, allowing you to set the correct time.

To set the hour and minute, turn the crown until the correct time has been reached.

Once the correct time is set, push the crown back to position 0.

Operating the Chronograph

 
Measuring cumulative times.

- Press pusher D1 to start
- Press pusher D1 to stop
- Press pusher D2 to reset

Measuring split times.

- Press pusher D1 to start
- Press pusher D2 to display interval split time (Chronograph continues running)
- Press pusher D1 to resume (hands will quickly advance to ongoing elapsed time)
- Press pusher D1 to stop
- Press pusher D2 to reset

- A** — Minute Hand
- B** — Hour Hand
- C** — Seconds Hand
- D1** — Pusher Start/Stop
- D2** — Pusher Start/Stop
- E** — Chronograph Seconds Hand
- F** — Chronograph Minutes Hand
- G** — Crown

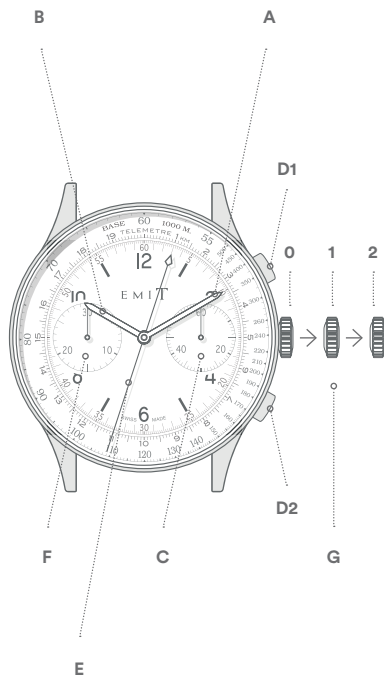

Limited Guarantee

EMIT Ltd guarantees the proper functioning of this watch against defects in manufacturing for a period of five years from the date of purchase.

The guarantee excludes normal wear and tear, batteries, straps, loss, theft or damage due to misuse or accident.

This guarantee is only valid if accompanied with an original proof of purchase from an official EMIT retailer.

Any work or servicing carried out to the watch by a third party other than an approved service agent will invalidate the guarantee.

Particulars below must be completed:

Model No.

Date of purchase

Customer's name

Retailers Name

Retailers Official Stamp or Address





www.emitcollection.com

